

9.2 CHANGING A BULLSEYE SYSTEM EXTINGUISHER BATTERY

TO REPLACE A 2,5 KG. EXTINGUISHER BATTERY

1. Turn the extinguisher upside down and remove the three Philips head screws holding the black battery cover in place.
2. Slowly pull the tab that says "PULL TO REMOVE." It may be necessary to gently manipulate the battery back and forth to remove it from the compartment.
3. Disconnect the old battery and connect the new one. It is not possible to connect the battery backwards.
4. Re-insert the battery as seen in Figure 2 and guide the battery and connector gently back into position. BE CAREFUL not to pinch the wires in the battery clamp.
5. Replace the black cover and Philips head screws.

TO REPLACE A 6 KG./9 KG. EXTINGUISHER BATTERY

1. Turn the extinguisher upside down and remove the three Philips head screws holding the black plastic cover in place.
2. Then remove the two Philips head screws holding the black battery cover in place.
3. Slowly pull the tab that says "PULL TO REMOVE." It may be necessary to gently manipulate the battery back and forth to remove it from the compartment.
4. Disconnect the old battery and connect the new one. It is not possible to connect the battery backward.
5. Re-insert the battery as seen in Figure 2 and guide the battery and connector gently back into position. BE CAREFUL not to pinch the wires in the battery clamp.
6. Replace the black battery cover and Philips head screws.



FIGURE 1



FIGURE 2

**HAAGEN**

Head Office, The Netherlands
Industrieweg 5, 5111 ND Baarle-Nassau
WWW.HAAGEN.COM